



 
Thank you for purchasing the PALMPERFECT® Electric Shaver. To ensure you have the best possible experience with this product, please read all instructions and precautions carefully before use.

### WARNING

This device is not a toy and is not intended for use by or on children. This device is intended for household use only. Do not use the device if it has a damaged blade or cutting unit, as injury may occur. Do not expose the device to direct sunlight, extreme temperatures or heated surfaces. This device is water resistant. It can be exposed to splashing water in the shower, and can be rinsed clean under the faucet. The device should not be completely submerged in water.

### PRODUCT FEATURES

1. Foil blade
2. Dual blades
3. Soft rubber grips
4. On/off button
5. Battery door
6. Lanyard
7. Cover

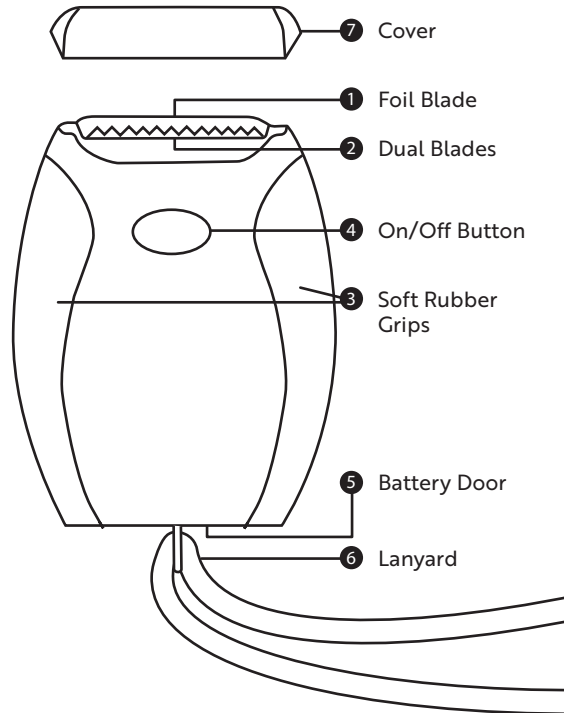

### BATTERIES

The shaver requires two (2) AAA 1.5 volt batteries for operation (not included). Do not use old or damaged batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Battery installation / replacement:

1. Twist the clasp in the direction of the arrows indicated on the battery door to remove the battery compartment cover (Fig. 1).
2. Insert two (2) AAA batteries into the battery compartment according to the polarity markings (+ / -) indicated within the compartment (Fig. 2).
3. Line up the dash (-) lines on both the battery door and the shaver body to push the battery compartment cover back into the shaver.
4. Turn the clasp back into its original position to secure the battery door in place.

Fig. 1


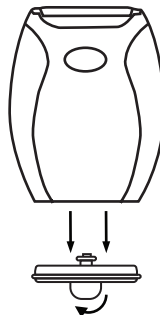


Fig. 2

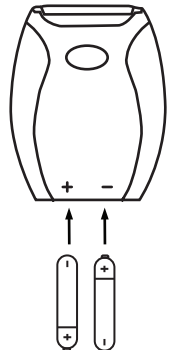

Note: The battery compartment cover will only fit in one direction. The shaver will not operate if the batteries are improperly installed. Replace the battery as soon as you notice the device is running slower than normal, otherwise hair pulling may occur.


## USING THE ELECTRIC SHAVER

This shaver is recommended for use on the legs, underarms, bikini line, etc. Before use, check the shaving head for damage. If signs of wear or damage are evident, do not use the shaver as injury may occur. It is not necessary to press hard when shaving your legs, underarms, or bikini line. Too much pressure while shaving may cause skin irritation, and the shaver will not function properly. For wet shaving, a thin layer of soap or shaving cream may be applied to the skin before shaving, but it is not recommended. Skin should be clean for dry shaving.

## CLEANING

Always clean the device with the power turned OFF. You can expose the device to running water for cleaning, but it should never be completely submerged. The blade assembly can be pulled from the unit and rinsed under running water (fig. 3). Both the blade assembly and area around the blades should also be wiped clean with a soft, dry cloth. For the best performance, we suggest lightly oiling the shaving head from time to time by spreading a drop of mineral oil over the foil and trimmers.

Fig. 3

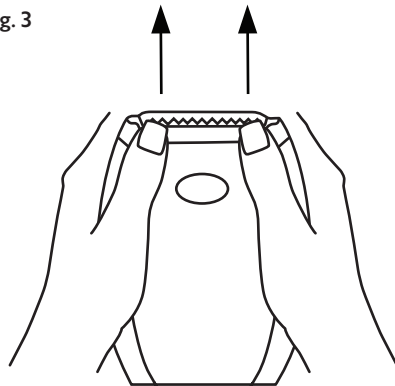

## CONTACT / WARRANTY / SUPPORT

The Electric Shaver carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. Beacon Wellness Brands will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the shaver free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact us Toll Free at (800) 514-2546, Monday - Friday from 8:30AM until 5:30PM EST.

Beacon Wellness Brands  
85 Wells Ave  
Suite 106  
Newton, MA 02459 USA

© 2022 Beacon Wellness Brands, Inc.