



**PALMPERFECT®**

## Bikini Trimmer

OWNER'S MANUAL

model 3881i

version 22.04.26

Thank you for purchasing the PALMPERFECT® Bikini Trimmer. To ensure you have the best possible experience with this product, please read all instructions and precautions carefully before use.

### WARNING

This device is not a toy and is not intended for use by or on children. This device is intended for household use only. Do not use the device if it has a damaged blade or cutting unit, as injury may occur. Do not expose the device to direct sunlight, extreme temperatures or heated surfaces. This device is water resistant to IPX4 standards. It can be exposed to splashing water in the shower, and can be rinsed clean under the faucet. The device should not be completely submerged in water.

### PRODUCT FEATURES

1. Dual Blades
2. Blade turn release
3. Battery port turn release
4. On/off button




### PRODUCT FEATURES

The trimmer requires two (2) AAA 1.5 volt batteries for operation (not included). Do not use old or damaged batteries.

Battery installation / replacement:

1. Unlock the battery compartment by twisting the handle to the left until the arrows line up and then pulling the cover away from the trimmer (Fig. 1).
2. Insert two (2) AAA batteries into the battery compartment according to the polarity markings (+ / -) indicated within the compartment. The batteries should fit snugly into place.
3. Replace the battery compartment cover by lining up the arrows and twisting to the right (Fig. 2).

Note: The device will not operate if the batteries are improperly installed. Replace the battery as soon as you notice the device is running slower than normal.

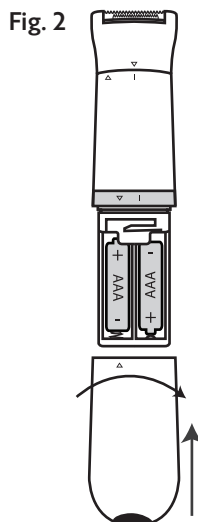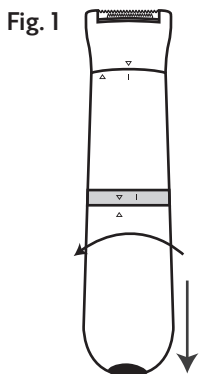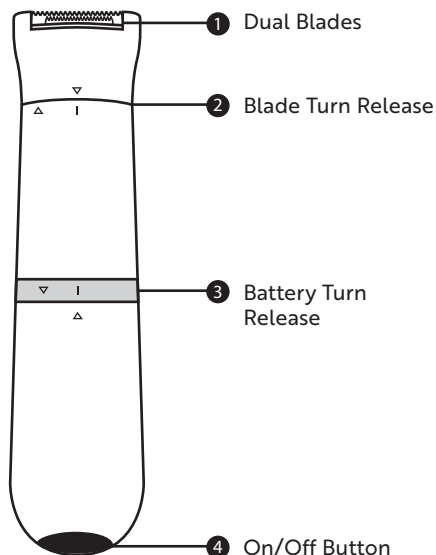

## HOW TO USE

Three trimming guides are included for trimming hair to a longer length. To install a guide, position open end of the guide over the larger blade and apply gentle pressure until it snaps into place (Fig. 3). To remove a guide, use the tab on the side of the guide and gently lift on one side (Fig. 4). Only install the guides with the trimmer turned off.

Note: Trimming guide is only intended for use with the larger blade. It will not fit in place over the smaller blade.

Power the device ON by pressing button on bottom of the device. Power the device OFF by pressing button on the bottom of the device a second time. Only operate the device with the trimmer head securely connected. Use larger blade for thicker hair or trimming with guides, use smaller blade for removing finer hair (Fig. 5).

## CLEANING

Always clean the device with the power turned OFF. You can expose the device to running water for cleaning, but it should never be completely submerged. Wipe with a clean, dry cloth after rinsing.

The trimming head can be removed to further clean the device. To remove the trimming head, carefully grip the sides of the trimming head, twist to the left and lift away from the device. To attach the trimming head, line up markings on the head and body of device and twist to the right (Fig. 6).

## CONTACT / WARRANTY / SUPPORT

The Bikini Trimmer carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. Beacon Wellness Brands will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the shaver free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact us Toll Free at (800) 514-2546, Monday - Friday from 8:30AM until 5:30PM EST.

Beacon Wellness Brands  
85 Wells Ave | Suite 106 | Newton, MA 02459 USA

Fig. 3



Fig. 4

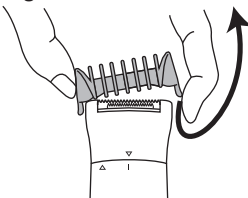 


Fig. 5

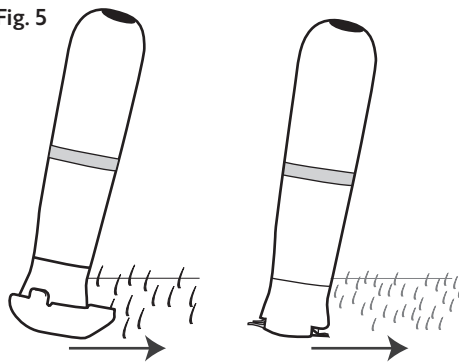 


Fig. 6

