



PALMPERFECT®

Total Grooming System

OWNER'S MANUAL

model 3882BC

version 22.07.07


Thank you for purchasing the PALMPERFECT® Total Grooming System. To ensure you have the best possible experience with this product, please read all instructions and precautions carefully before use.

WARNING

This device is not a toy and is not intended for use by or on children. This device is intended for household use only. Do not use the device if it has a damaged foil, blade, or cutting unit, as injury may occur. Do not expose the device to direct sunlight, extreme temperatures or heated surfaces. This device is water resistant to IPX4 standards. It can be exposed to splashing water in the shower, and can be rinsed clean under the faucet. The device should not be completely submerged in water. This device should be used with the Omm protective guide in sensitive areas.

PRODUCT FEATURES

1. Bikini & Body Trimmer
2. Detail Trimmer
3. Facial Hair Remover
4. Twist Attachment Change
5. Battery Port & Twist On/Off

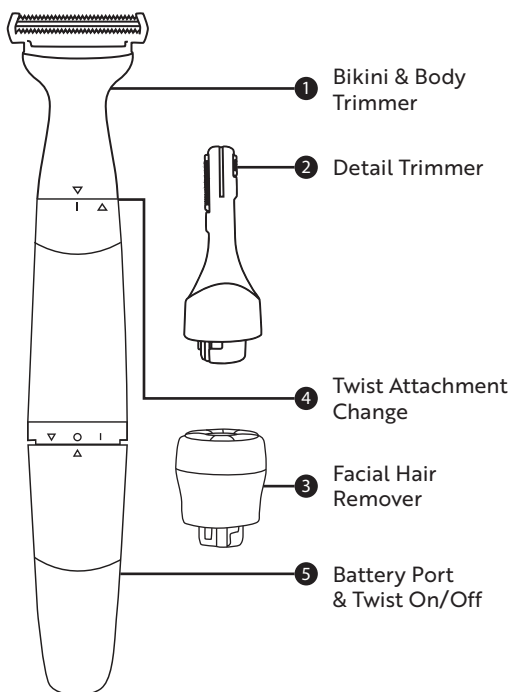

BATTERIES

The groomer requires one (1) AA 1.5 volt alkaline battery (not included) for operation. Do not use old or damaged batteries.

Battery installation / replacement:

1. Unlock the battery compartment by twisting the handle to the left until the arrows line up and then pulling the cover away from the groomer (Fig. 1).
2. Insert one (1) AA battery into the battery compartment according to the polarity markings (+ / -) indicated within the compartment. The battery should fit snugly into place.
3. Replace the battery compartment cover by lining up the arrows and twisting to the right (Fig. 2).

Note: The device will not operate if the battery is improperly installed. Replace the battery as soon as you notice the device is running slower than normal.

Fig. 1


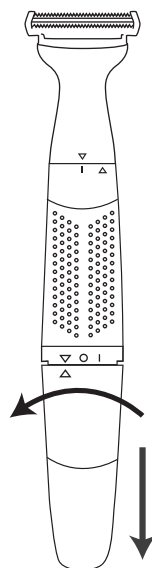 


Fig. 2

 

CHANGING ATTACHMENTS

The Total Grooming System includes a bikini/body shaver, detail trimmer, and facial hair remover attachments. The attachments can be interchanged easily. Only change attachments with the device powered OFF.

Attachment removal / installation

1. Twist the attachment head to the right until the arrows line up, and lift it up and away from the device (Fig 3).
2. Position the new attachment so the arrows line up and connect it to the device. Twist to the left to lock it into place (Fig 4).

Fig. 3


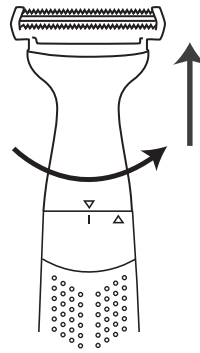 


Fig. 4

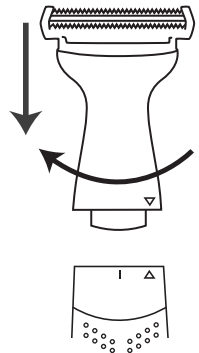 

USING THE TRIMMING GUIDES

Trimming guides are included for trimming hair to a longer length. The trimming guides shown in Fig. 5 are compatible with the bikini/body shaver attachment. Only install or remove the guide with the attachment secured to the device. To install the guide, position it over the blades and apply gentle pressure until it snaps into place (Fig. 5). It can be removed by pulling gently away from the blades.

The trimming guides shown in Fig. 6 are compatible with the detail trimmer attachment. Only install or remove the guide with the attachment secured to the device. To install the guide, position it over the top of the attachment and apply gentle pressure until it snaps into place (Fig. 6). It can be removed by gently pulling up and off the attachment.

Fig. 5


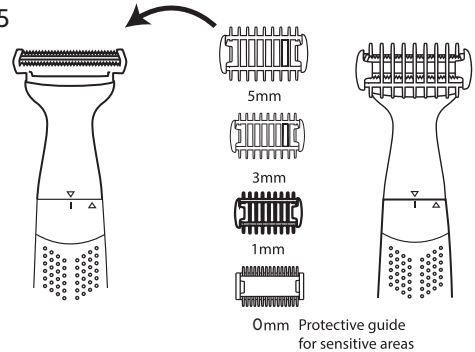 


Fig. 6

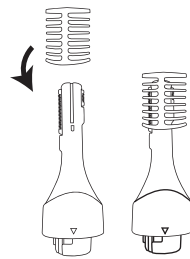 

USING THE TOTAL GROOMING SYSTEM

Power the device ON by twisting the handle to the right. Power the device OFF by twisting the handle to the left. Only operate the device with an attachment securely connected. Never use the device on irritated or damaged skin.

Bikini / Body Shaver:

This attachment can be used with or without the guide attached depending on the desired hair length. For best results, use short, even strokes. Apply only light pressure - it's not necessary to press hard. For sensitive areas use the 0mm protective trimming guide.

Facial Hair Remover:

This attachment can be used to remove hair around the face and neck. For best results, use small and circular strokes to get the most hair. The facial hair remover requires little to no pressure when using.

Detail Trimmer:

This attachment is effective to use on eyebrows, nose hair, or ear hair. Avoid using the detail trimmer on longer hair, as pulling or irritation may occur. Use short, even strokes and apply only light pressure.

CLEANING

Always clean the device with the power turned OFF. You can expose the device to running water for cleaning, but it should never be completely submerged. Wipe with a clean, dry cloth after rinsing. The attachments can be removed for cleaning separately if needed. Shake out any excess debris, and blow or rinse off the cutting assembly.

CONTACT/ WARRANTY/ SUPPORT

The Total Grooming System carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. Beacon Wellness Brands will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the shaver free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact us Toll Free at (800) 514-2546, Monday - Friday from 8:30AM until 5:30PM EST.

Beacon Wellness Brands
85 Wells Ave
Suite 106
Newton, MA 02459 USA

© 2022 Beacon Wellness Brands, Inc.