



PALMPERFECT®

Full Body Groomer

OWNER'S MANUAL

model 3896

version 22.04.26

Thank you for purchasing the PALMPERFECT® Full Body Groomer. To ensure you have the best possible experience with this product, please read all instructions and precautions carefully before use.

DANGER



This device is not a toy and is not intended for use by or on children and is for household use only. Do not use the device if it has a damaged blade or cutting unit, as injury may occur. Do not expose the device to direct sunlight, extreme temperatures or heated surfaces. The batteries in this product may present a fire or chemical burn hazard if mistreated. Do not disassemble.

WARNING

Do not place or store the product while plugged in where it can fall or be pulled into a tub or sink. Do not place or drop the product in water or other liquid while plugged in. Do not reach for a corded product that has fallen into water. Unplug immediately. The power cord and the accessories connected to it are not for immersion or for use in shower. Charging or using the product at temperatures below 40°F (4.5°C) or higher than 95°F (35°C) adversely affects the lifespan of the battery. If the product is subjected to a major change in temperature, pressure or humidity, let the product acclimatize for 30 minutes before use.

PRODUCT FEATURES


1. Body Groomer curved blade
2. Comfort guard
3. Blade eject button
4. On/off switch
5. Silicone handle
6. Indicator light
7. Charging socket
8. Two trimming guides
9. Cleaning brush
10. USB cable

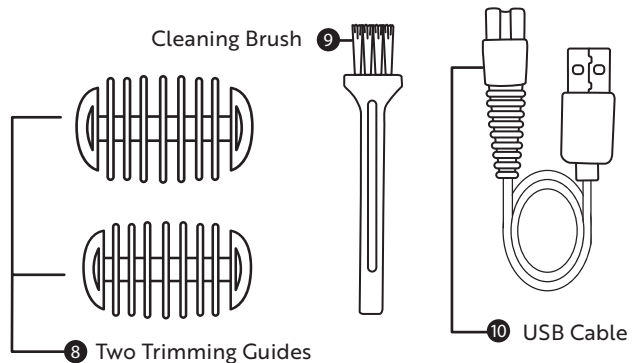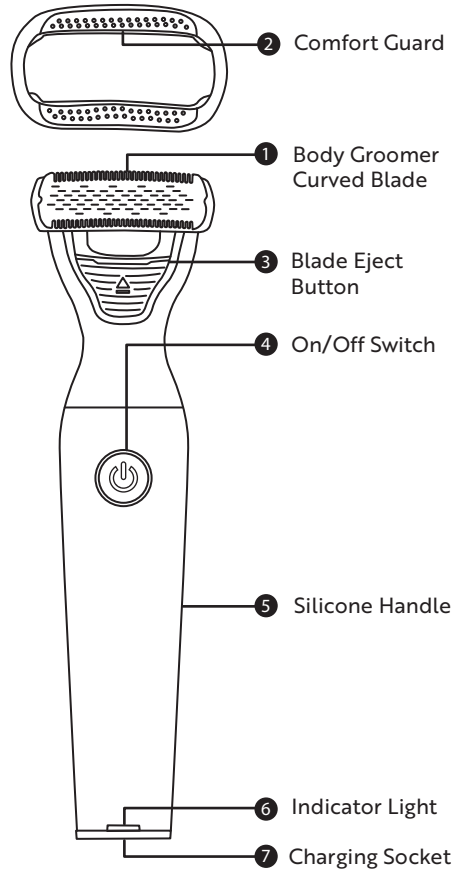

CHARGING

1. Make sure the product is switched off.
2. Insert the small plug into the charging socket and plug the USB cable into a 5 Volt USB wall adapter (standard mobile phone charger) (Fig.1). *Do not use an extension cord with this product. Only use the charging cable supplied to recharge the appliance.*
3. The indicator will turn red when charging.
4. The red light will turn off when the product is fully charged after approx. 2 hours.
5. After charging, remove the adapter from the wall outlet and pull the small plug out of the product.

 Fig. 1

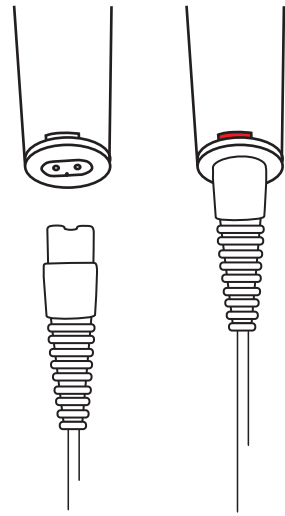

HOW TO USE

Always check the product and all accessories before using. Do not use the product or any accessory if it is damaged, as this may cause injury.

1. Press the on/off button once to turn the product on or off.
2. Use the groomer with or without an attachment. Use the comfort guide for sensitive areas, or the trimming guides for trimming hair to longer lengths. Attach a guide by positioning it over the curved blade and pushing down gently until it snaps into place. (Fig. 2).
3. While pressing lightly, begin shaving against the grain with long strokes. Make sure that the body groomer is in full contact with the skin by placing it flat on the skin (Fig. 3). The Full Body Groomer is great for shaving the legs, arms, underarms, bikini area, and other sensitive parts of the body.
4. After shaving switch off the groomer.

Fig. 2


 
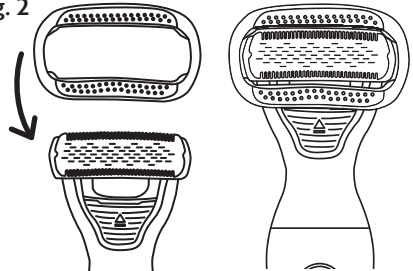 


Fig. 3

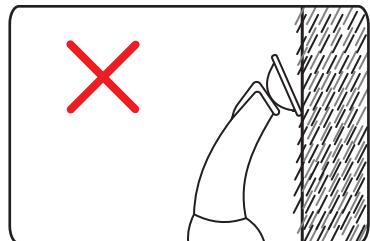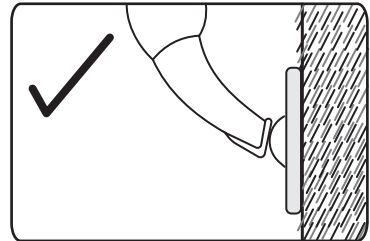 

STORAGE

1. Turn off the product.
2. Remove cord from outlet and the product. *Do not wrap cord around the product.*
3. Store it in a safe, dry location where it will not be subject to damage.

CLEANING

Always clean the device with the power turned OFF. You can expose the device to running water for cleaning, but it should never be completely submerged. Wipe with a clean, dry cloth after rinsing.

The trimming head can be removed to further clean the device. To remove the trimming head, carefully grip the sides of the trimming head, and push upwards on the blade eject button (Fig. 4). To attach the trimming head, line up blade and press it back into the handle.

Note: The blade is fragile. Handle it carefully. Replace the blade immediately if it is damaged.

DISPOSAL

This product contains a rechargeable lithium-ion battery which must be disposed of properly. Contact your local town or city officials for battery disposal information.

CONTACT / WARRANTY / SUPPORT

The Full Body Groomer carries a warranty against manufacturing defects (excluding cutting blades) for two years from the date of original purchase. Beacon Wellness Brands will, at our option and upon submission of a valid proof of purchase within the warranty period, repair or replace the device free of charge. For assistance or for issues related to performance, damages, blade replacement, warranty, regular maintenance or customer feedback, please contact us Toll Free at (800) 514-2546, Monday - Friday from 8:30AM until 5:30PM EST.

Beacon Wellness Brands
85 Wells Ave
Suite 106
Newton, MA 02459 USA

© 2022 Beacon Wellness Brands, Inc.

Fig. 4

